



# Chumby One Chassis Removal

Prerequisite Guide Only

Written By: Jordan Houchins



# INTRODUCTION

Prerequisite Guide Only

---



## TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Chassis



- Remove 4 self-adhesive plastic dots covering the screw holes.


## Step 2

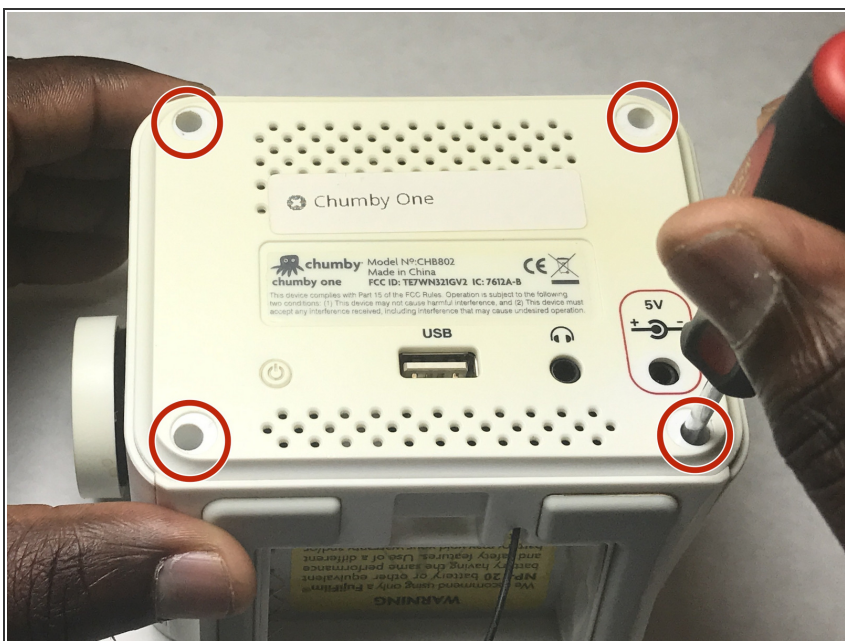

- Remove the four 2mm screws with a Phillips screwdriver.




## Step 3

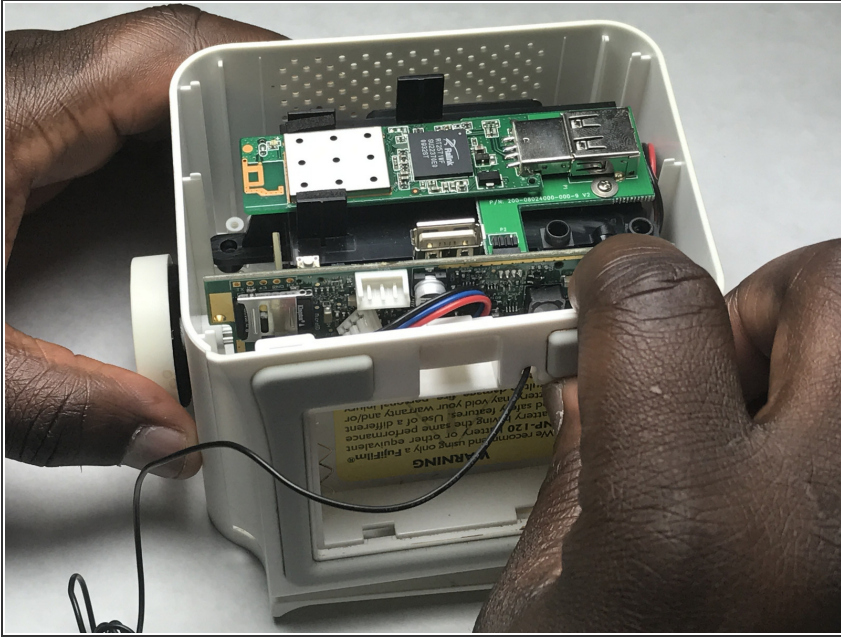


- Remove the back and bottom cover.

## Step 4

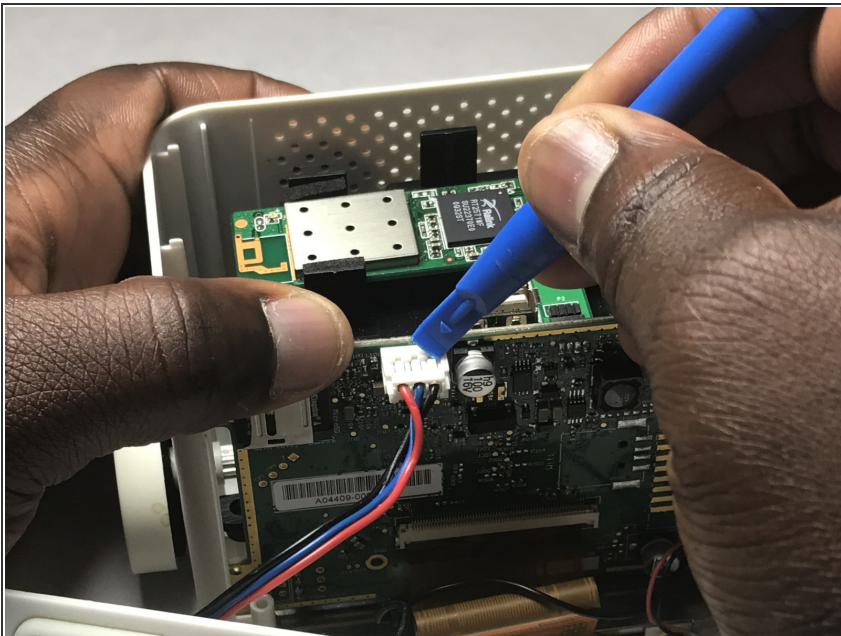


- Disconnect the battery connector from the motherboard with a plastic opening tool.

## Step 5

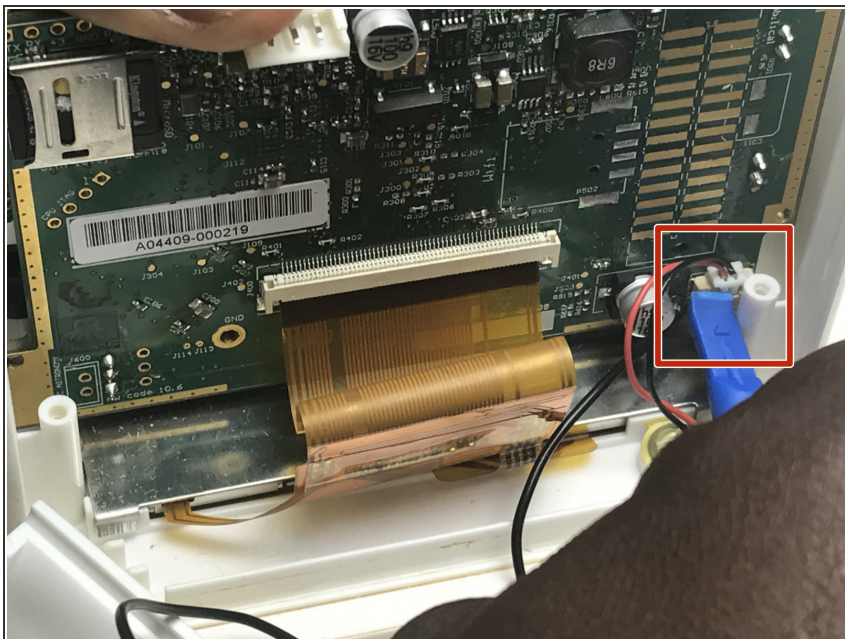

- Disconnect the microphone connector from the motherboard with a plastic opening tool.


## Step 6

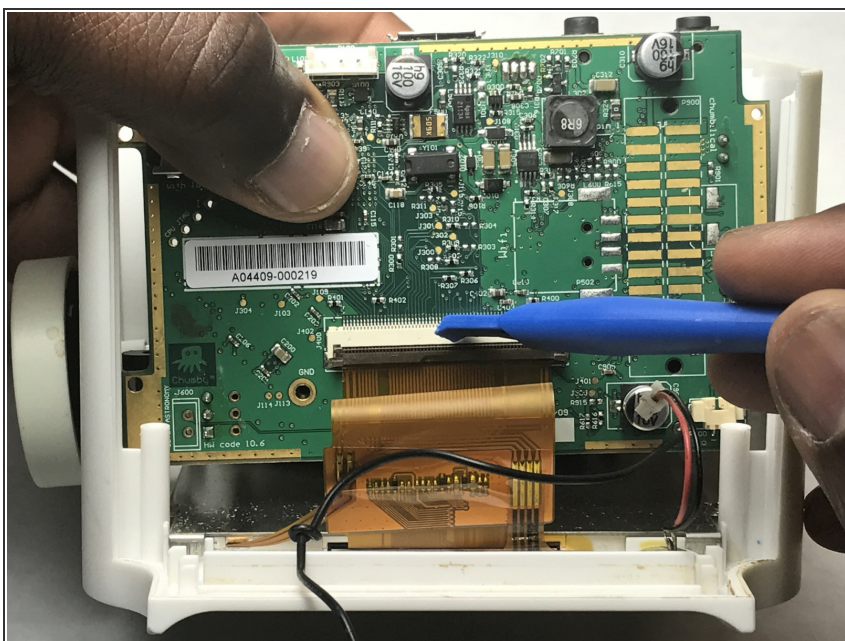

- Remove the display ribbon cable from its socket with a plastic opening tool.




## Step 7

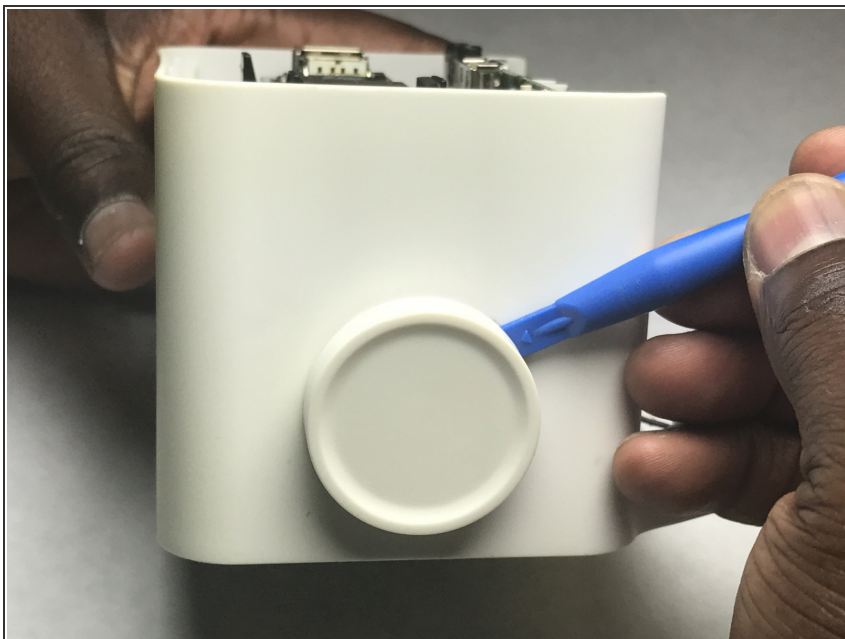


- Remove the volume knob from the side of the Chumby One with a plastic opening tool.

## Step 8

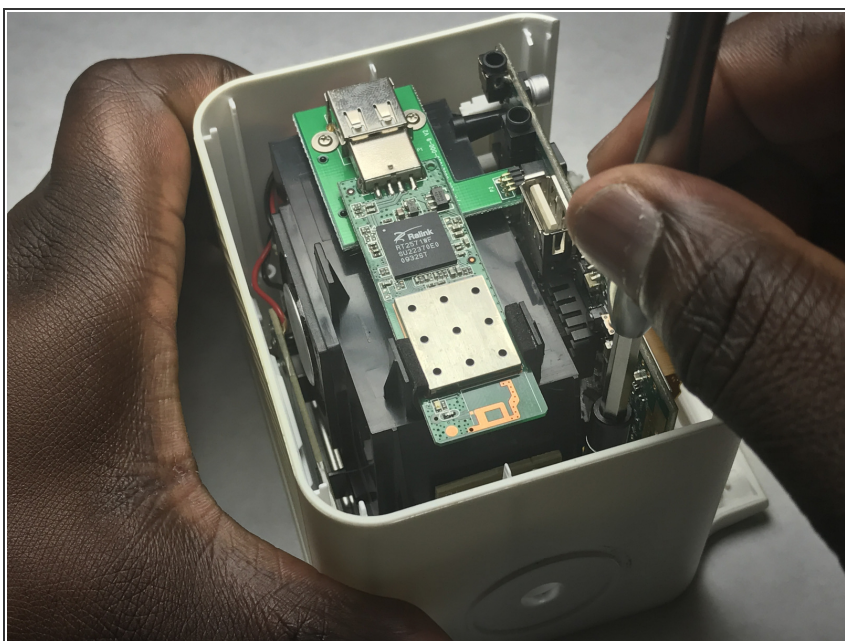

- Remove the four 6mm screws using a PH000 bit on the inner chassis.

## Step 9

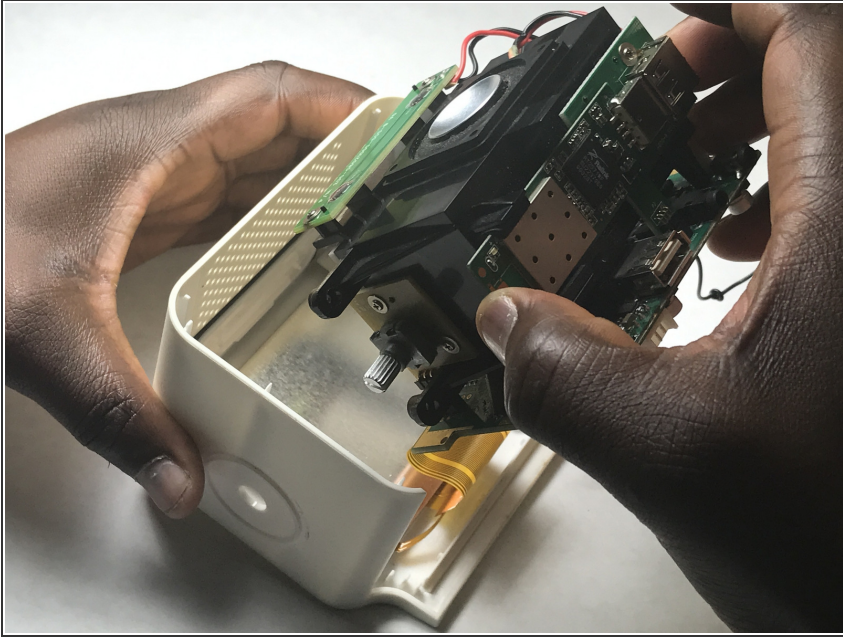

- Remove the inner components from the outer shell.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 08:49:11 AM.